


(OPTIONAL)

TELESCOPING WIND DEFLECTOR DIAGRAM AND INSTRUCTIONS

Part #35590

1. Center
2. L/R Outer
3. 5/16" x 3/4" Bolt (Part#9610)
4. 5/16" nylock nut (Part#9320)

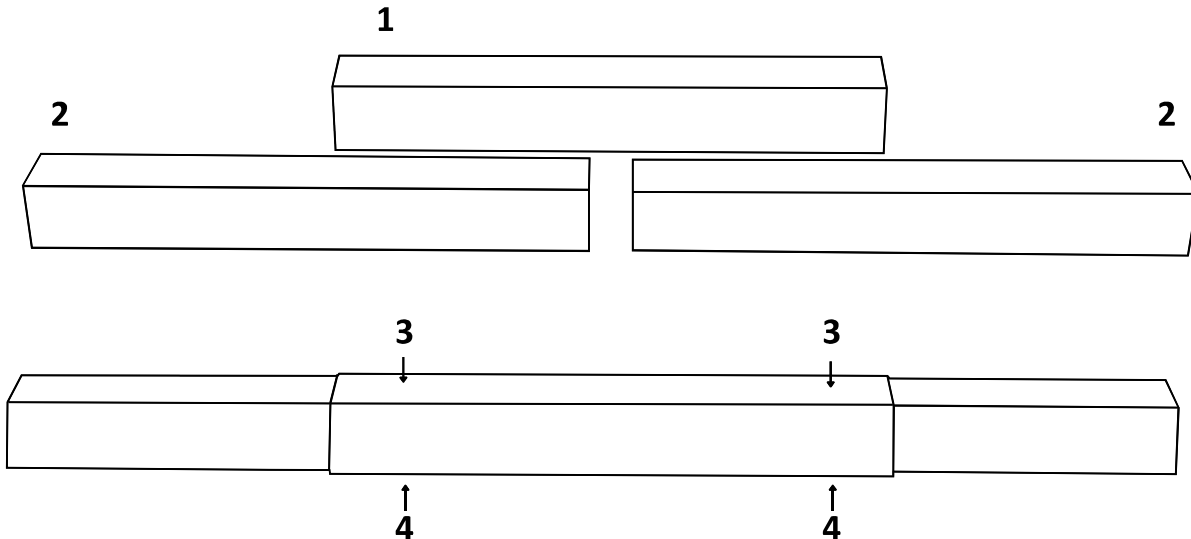

INSTALLATION

STEP 1:

Measure the inside distance between the two Wind Deflector Mounting Brackets. This will be the overall length of the assembled wind deflector.

STEP 2:

Slide the left and right outer sections into the center section until the overall length matches your measurement. Adjust both outer sections equally so the center section remains centered on the assembly.

STEP 3:

Once the correct length has been established, clamp the three sections together to prevent movement. On each side of the center section, mark two holes 1" from the end of the center section and 1" from both the top and bottom edges of the wind deflector. Drill four 5/16" holes through the overlapping sections.

STEP 4:

Secure each side using one 5/16" x 3/4" bolt and one 5/16" nylock nut. Tighten both fasteners until the assembly is rigid.