

# To Install Tarp onto Roller

Pioneer HR4759 Tarp being installed  
onto a H7002C Roller

# Step one

- Lay tarp out on floor with Reinforcement side towards ground. Pull apart and have nice and neat. Also have three pieces of shock cord nearby.
- Should look like next picture.

# Tarp laid out in preparation for install



# Step Two

There are three sets of loops on the top of the tarp. There are three pieces of “shock cord” provided with each tarp.

“Shock Cord” is bungee cord type rope.

The cord gets tied and directed from left to right.

I drew **red** stars where each loop is on the tarp



Close up of one of edge loops (where you tie the first knot)



# Close up of Center loop in the Tarp




# Step Three

- Tie a knot in either of the loops at the edge of the tarp. It can be either the Drivers side or Passengers side. It does not matter.
- Pic below shows the first knot



Tie double or triple knot on edge loop.

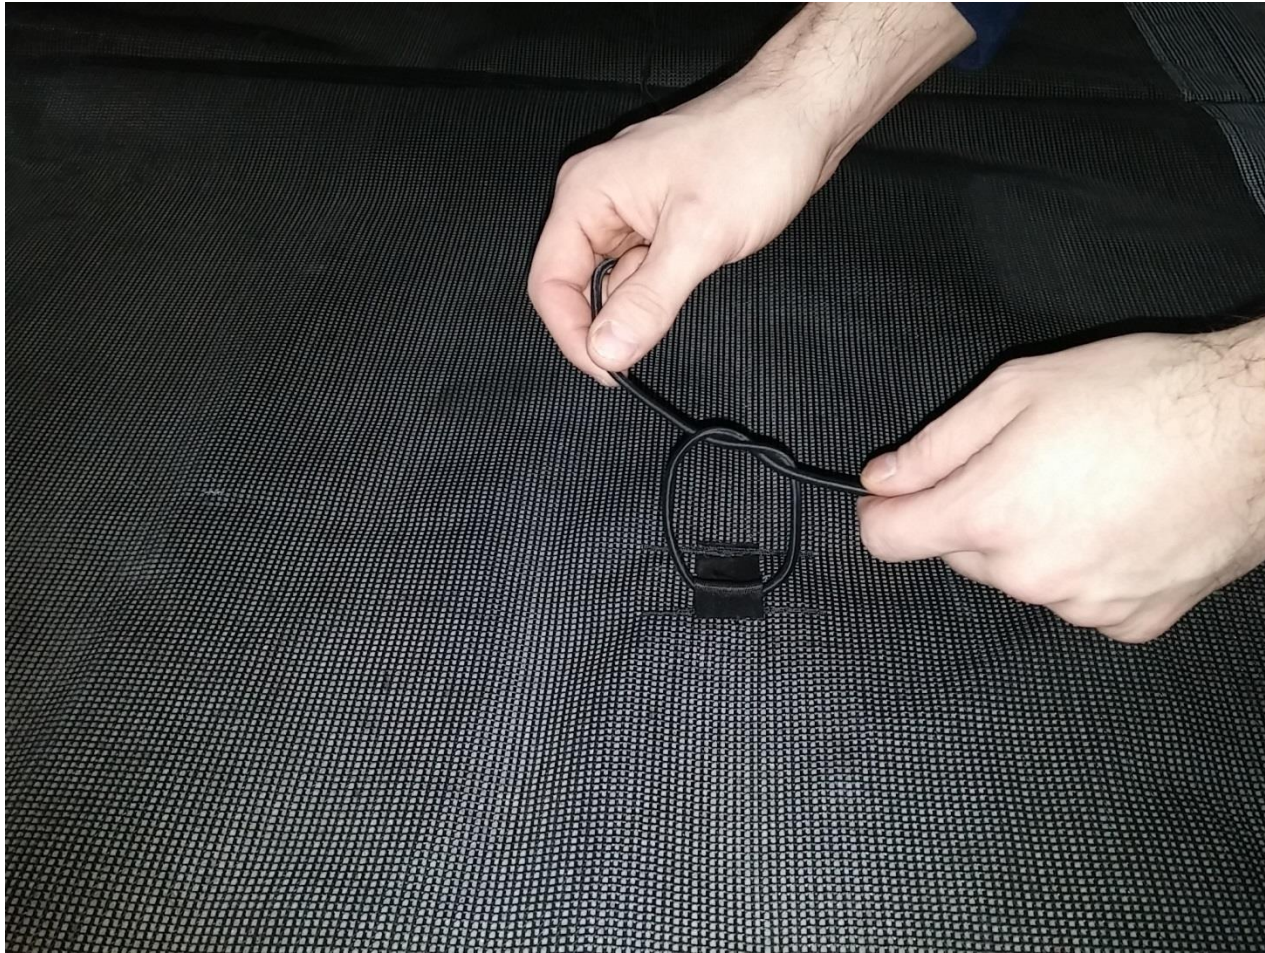

# Step Four

- Run the Shock Cord **THROUGH** the center loop. Just like threading a needle.

# Run cord through center Loop



# Step Five

- **This is where a little skill comes into play.**
- We are now tying off the last Loop.
- **Pull the slack out of the shock cord and then pull an additional 6 to 10 inches(of tension).**
- Only tie a decent single knot because you may have to adjust later on (either by adding more or less tension)

A couple feet of cord pulled out and then tied off on last loop



Now the Tarp should look like this



Attach Tarp to the roller. Bolts and Washers go through grommets. Make sure tarp is coming out **BOTTOM** of Roller when done



# Step Six, part 2

- Start winding the tarp onto Roller.
- This is where a few people make it MUCH easier. You need one person on each side of the tarp FOLDING the flaps underneath while it get wound onto the roller. The neater the better!!!!!! If it is just thrown on without care the Tarp will always give you problems.
- I say “I want it to look like a roll of paper towels when it is all done”. Nice and neat and flap folded up crisp.



# Step 7

- As the tarp gets wound onto Roller you need to fold the “Flaps” underneath the Tarp.
- The Tarp is 9’ wide but needs to be folded up to a little over 8’ wide to fit on the roller.
- This is where multiple people helping would be beneficial.
- Next picture is of my guys folding flaps


Fold flaps under the whole way when installing tarp to roller.



# Step 8

- Start rolling tarp onto Roller with people pulling the tarp and folding the flaps underneath.
- The neater you do this the better the tarp will work once on the truck

# Starting to wind tarp on the roller

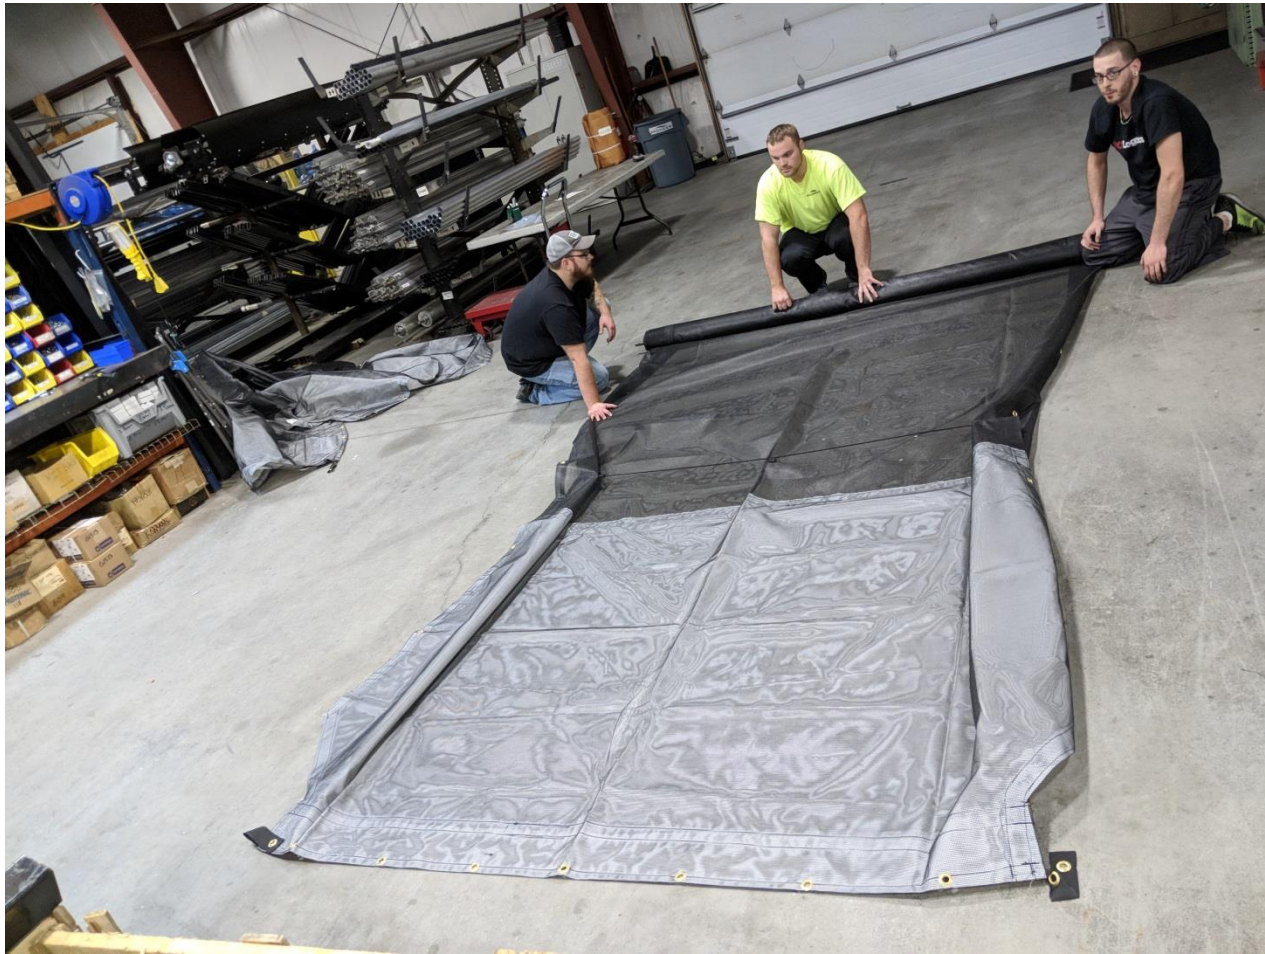

Here is a better pic of the two guys pulling the tarp nice and neat



And another.



Continue until all the way wound on.  
this picture shows it almost done.



# Keep going. Almost Done





# Finished !!!!!



# Step 9

- Finished.
- Now install Roller onto arms and wind.
- We have a video of how to wind the roller here at this link <https://www.youtube.com/watch?v=kvRLez70jyQ>
- **This is where you may have to add a little more tension to the Shock cords (or take some tension off).** Then tie all knots securely once you run the arms a few times. Flaps should fold over side of container on their own when covering. And fold up for you on their own when un-covering.

# Quick Winding Roller Instructions

- – As viewed from **DRIVERS** side
- – Wind the **SHAFT** (not the aluminum Tube)
- - 7 Revolutions
- – Counterclockwise